


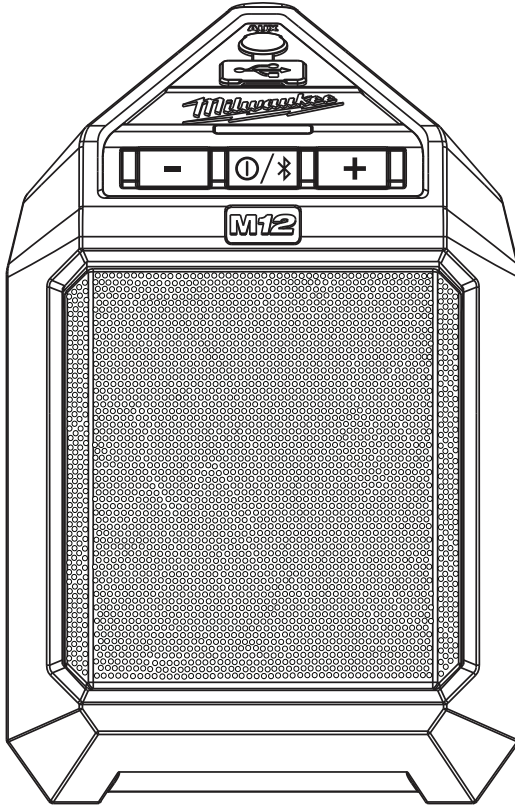

# OPERATOR'S MANUAL

Cat. No.  
M12 JSSP



Bluetooth™

## M12™ JOBSITE SPEAKER

**TO REDUCE THE RISK OF INJURY, USER MUST READ AND UNDERSTAND OPERATOR'S MANUAL.**

## IMPORTANT SAFETY INSTRUCTIONS

**⚠ WARNING READ, UNDERSTAND AND FOLLOW ALL INSTRUCTIONS.**  
 Failure to heed all warnings listed below, may result in electric shock, fire and/or serious personal injury. **KEEP THESE INSTRUCTIONS.**

- **Read these instructions.**
- **Keeps these instructions.**
- **Heed all warnings.**
- **Follow all instructions.**
- **Do not use this apparatus near water.** Never immerse the apparatus in liquid or allow a liquid to flow inside the apparatus. Water entering an apparatus will increase the risk for electric shock.
- **Clean only with dry cloth.** Certain cleaning agents and solvents are harmful to plastics and other insulated parts. Some of these include: petrol, turpentine, lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia and household detergents containing ammonia. Clean dust and debris from vents. Keep the apparatus handle clean, dry and free of oil or grease.
- **Do not block any ventilation openings.** Install in accordance with the manufacturer's instructions.
- **Do not use near any heat sources** such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Use only attachments/accessories specified by the manufacturer.**
- **Only operate this apparatus in a well ventilated area.**
- **Refer all servicing to qualified service personnel.** Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture or does not operate normally. Service or maintenance performed by unqualified personnel could result in a risk of injury.
- **A battery operated apparatus with integral batteries or a separate battery pack must be recharged only with the specified charger for the battery.** A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
- **Use battery operated apparatus only with specifically designated battery packs.** Use of any other batteries may create a risk of fire.
- **When battery pack is not in use, keep it away from other metal objects like: paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another.** Shorting the battery terminals together may cause sparks, burns, or a fire.
- **Avoid body contact with grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is grounded.
- **Never disassemble the apparatus or try to do any rewiring on the apparatus's electrical system.**
- **Do not expose this apparatus to dripping and splashing, or place objects filled with liquids on this unit.**

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.


However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### SPECIFICATIONS

Cat. No.	Input Volts	USB Output Volts	USB Output Amps
M12JSSP	12 DC	5 DC	2.1

### FUNCTIONAL DESCRIPTION

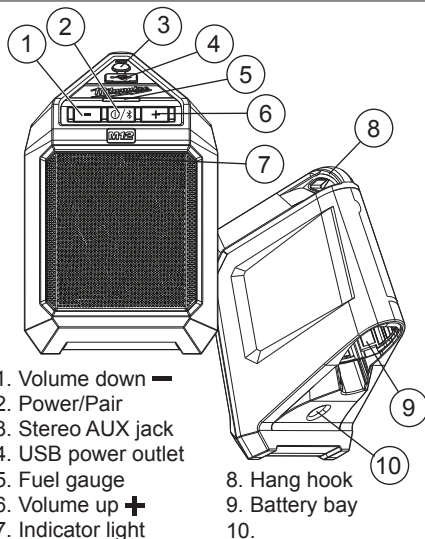




1. Volume down **⏮**
2. Power/Pair
3. Stereo AUX jack
4. USB power outlet
5. Fuel gauge
6. Volume up **⏭**
7. Indicator light

8. Hang hook
9. Battery bay
- 10.

### SPECIFIC SAFETY RULES


- **Maintain labels and nameplates.** These carry important information. If unreadable or missing, contact a MILWAUKEE® service facility for a replacement.
- **This apparatus is designed to be powered by a 12 volt MILWAUKEE® Li-Ion battery pack.** Do not attempt to use with any other voltage or power supply.

## SYMBOLLOGY

	Volts
	Direct Current
	To reduce the risk of injury, user must read operator's manual.

- The speaker will continue to search for a signal for 10 minutes.
- To manually pair a device, turn on the speaker and select "M12 Speaker" on the Bluetooth capable device.
- Once paired, the speaker will automatically re-connect to the same device when the speaker is turned on.
- To pair the speaker to a different device, press and hold the power/pair button for 3 seconds until the indicator light flashes. It will then be in pair mode and can be connected to a different device.
- Once the device has successfully paired with the speaker, use the device controls to move through tracks and control volume.

## ASSEMBLY

 **WARNING** Recharge only with the charger specified for the battery. For specific charging instructions, read the operator's manual supplied with your charger and battery.

### Inserting/Removing the Battery

To **remove** the battery, push in the release buttons and pull the battery pack away from the speaker.

To **insert** the battery, slide the pack into the body of the speaker. Make sure it latches securely into place.

### Fuel Gauge

The Fuel Gauge will show the remaining battery charge for 2-3 seconds after turning on the speaker. To signal the end of charge, 1 light on the fuel gauge will blink slowly until the speaker shuts off automatically.

### Battery Pack Protection

To protect the life of the battery pack, the speaker will shut off when the battery's charge becomes too low. If this happens, remove the battery pack and charge it according to the charger's instructions.

### Connecting an Auxiliary Device


Connect an MP3 player, CD player, or other audio device directly to the speaker using the stereo auxiliary jack AUX IN.

### USB Power Outlet

This outlet can be used to charge a cell phone, power an MP3 player or any other device that uses less than 2.1A of DC electrical current.

**NOTE:** Any device that uses more than 2.1 A of DC electrical current will trip a self-resetting overload and disable the output.


## OPERATION

 **WARNING** To reduce the risk of fire or electric shock, do not expose this speaker to rain or moisture.

 **Turning On/Off and Connecting to Bluetooth**  
Press the Power/Bluetooth  button to turn the speaker on and off.


- If no Bluetooth device was previously paired, Bluetooth pairing will begin automatically and the indicator light will flash continuously.

### Volume

Use the  to increase or decrease the volume.


**NOTE:** To control the volume using the device's controls, first turn the speaker volume to max (a beep will sound).

## MAINTENANCE

 **WARNING** To reduce the risk of injury, always unplug the charger and remove the battery pack from the charger or tool before performing any maintenance. Never disassemble the tool, battery pack or charger. Contact a **MILWAUKEE®** service facility for **ALL** repairs.

### Maintaining Tool

Keep your tool, battery pack and charger in good repair by adopting a regular maintenance program. If the tool does not start or operate at full power with a fully charged battery pack, clean the contacts on the battery pack. If the tool still does not work properly, return the tool, charger and battery pack, to a **MILWAUKEE®** service facility for repairs.

 **WARNING** To reduce the risk of personal injury and damage, never immerse your tool, battery pack or charger in liquid or allow a liquid to flow inside them.

### Cleaning

Clean dust and debris from charger and tool vents. Keep tool handles clean, dry and free of oil or grease. Use only mild soap and a damp cloth to clean the tool, battery pack and charger since certain cleaning agents and solvents are harmful to plastics and other insulated parts. Some of these include petrol, turpentine, lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia and household detergents containing ammonia. Never use flammable or combustible solvents around tools.

### Repairs

For repairs, return the tool, battery pack and charger to the nearest authorised **MILWAUKEE®** dealer or service center.

## ACCESSORIES

 **WARNING** Always remove battery pack before changing or removing accessories. Only use accessories specifically recommended for this tool. Others may be hazardous.

For a complete listing of accessories refer to your **MILWAUKEE®** Electric Tool catalog or go online to [www.milwaukeetools.com.au](http://www.milwaukeetools.com.au) / [www.milwaukeetools.co.nz](http://www.milwaukeetools.co.nz). To obtain a catalog, contact your local distributor or service center.

## GENERAL POWER TOOL SAFETY WARNINGS

Please refer to the Techtronic Industries Pty. Ltd. Warranty Terms and Conditions for **MILWAUKEE®** products and accessories which is supplied with the tool or kit. This warranty applies only to product purchased from an authorised **MILWAUKEE®** dealer in Australia or New Zealand.

## AUSTRALIA AND NEW ZEALAND

**MILWAUKEE®** prides itself in producing a premium quality product that is Nothing But Heavy Duty®. Your satisfaction with our products is very important to us! If you encounter any problems with the operation of this tool, please contact the store where the product was originally purchased or one of our authorised **MILWAUKEE®** service centres.

For a list of authorised **MILWAUKEE®** dealers or service centres please contact **MILWAUKEE®** Customer Service on:  
Australia: 1300 MILWAUKEE (1300 645 928)  
[www.milwaukeetools.com.au](http://www.milwaukeetools.com.au)  
New Zealand: 0800 279 624  
[www.milwaukeetools.co.nz](http://www.milwaukeetools.co.nz)

**Milwaukee Electric Tool Corporation**  
13135 West Lisbon Road, Brookfield, Wisconsin U.S.A. 53005

**Milwaukee Electric Tool Corporation (Australia)**  
Techtronic Industries (Australia) Pty. Ltd.  
Doncaster, Victoria, Australia, 3108

**Milwaukee Electric Tool Corporation (New Zealand)**  
Techtronic Industries (New Zealand) Pty. Ltd.  
Mangere, Auckland, New Zealand, 2022

Professionally made in China for Milwaukee Electric Tool Corporation