
## SERVICE PARTS LIST


Milwaukee SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS M12 FUEL™ 1/4" Right Angle Die Grinder

REVISED BULLETIN DATE June 2019

WIRING INSTRUCTION

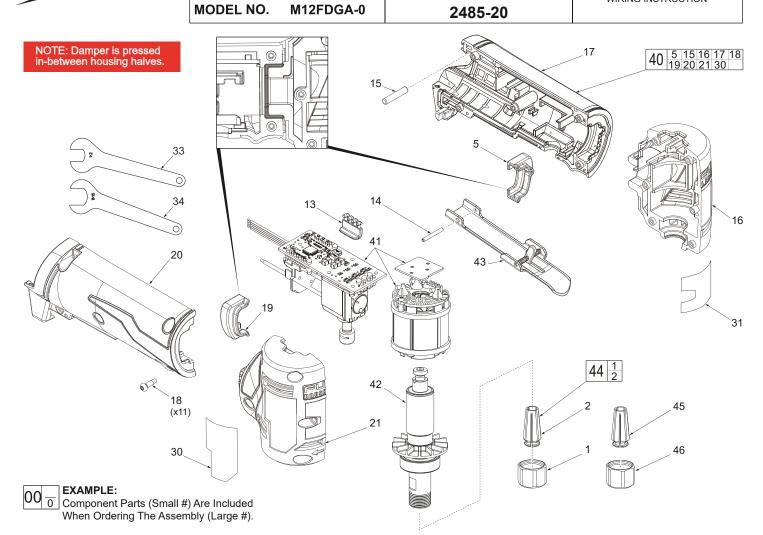

Install the electronics assembly, route wires through wire traps and channels as shown. Be sure all components are seated squarely and firmly in place. Be sure there is no interference when installing the housing covers (20, 21).

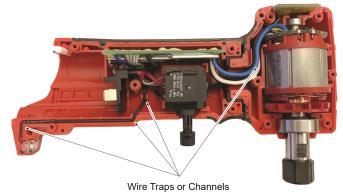

| SCREW TORQUE SPECIFICATIONS |                    |             |          |
|-----------------------------|--------------------|-------------|----------|
|                             |                    | SEAT TORQUE |          |
| FIG.                        | WHERE USED         | (KG/CM)     | (IN/LBS) |
| 18                          | Housing Cover Head | 7-9         | 6.0-7.8  |
| 18                          | Housing Cover Grip | 7-9         | 6.0-7.8  |